


## Cutting The Parts

- Grey areas are not used.
- All measurements are in cm.

1. Measure
2. Mark solid lines for cuts.
3. Mark dotted lines for folds.
4. Re-measure. Then fix if necessary. If you ruin your cardboard, you will have to find your own new cardboard in the recycling.
5. Cut on solid lines.
6. Crease and fold on dotted lines.

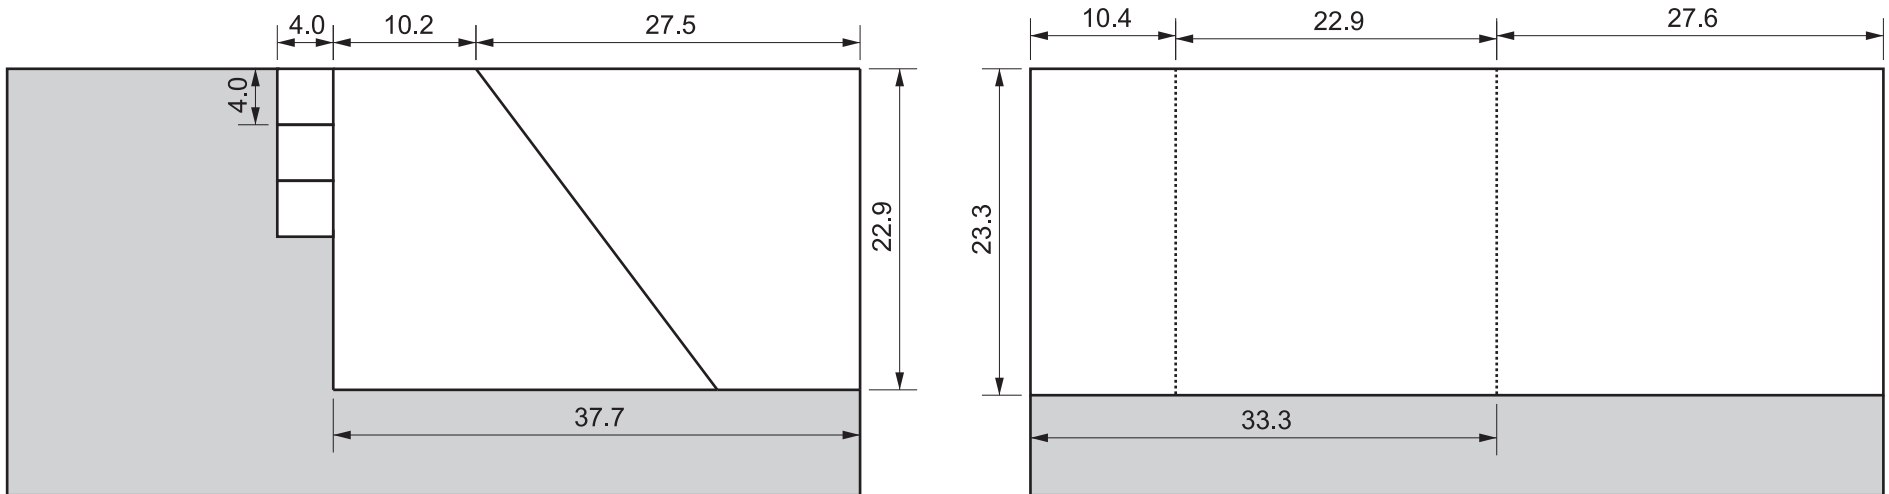

Assembly diagram on back



# Assembly

- Fold the front/bottom/back piece.
- Use tape (on the outside only) to temporarily hold the sides in place.
- "Caulk" the insides of edges with white glue.
- Glue together the three small squares. Later you will drill a hole through them to hold a thermometer.
- Glue the small squares to the side as shown. Hold them in place with tape.
- Write your name on your oven and leave it to dry.

